BANDAI NAMCO

STAR WARS DARTH VADER TAMAGOTCHI

INSTRUCTIONS

BANDAI ®MD

8+

#90101

B1L (GB)

GROWTH CHART

Follow Anakin Skywalker on his journey to the dark side as he becomes Darth Vader!

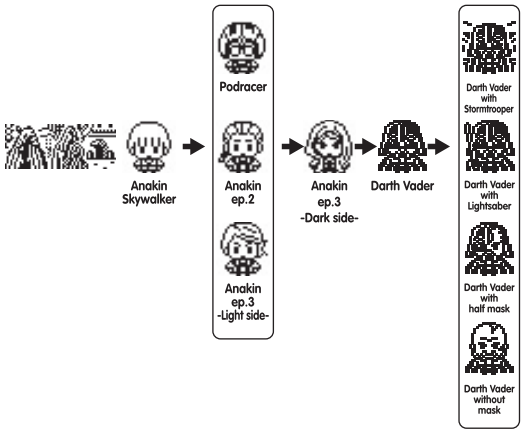

1 MAIN UNIT INSTRUCTION

FRONT

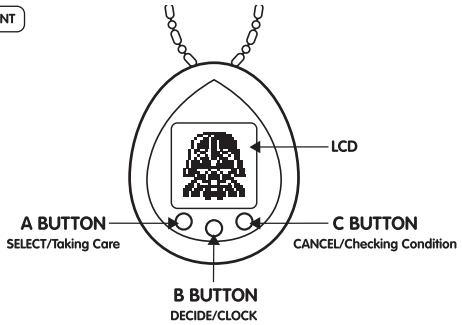

BACK

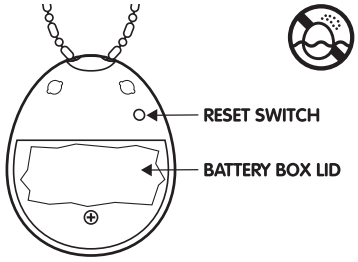

Please do not put Tamagotchi device in water as it may not work. Please avoid using or storing in humid places.

BALL CHAIN

Pinch the joint parts firmly to unlock chain.

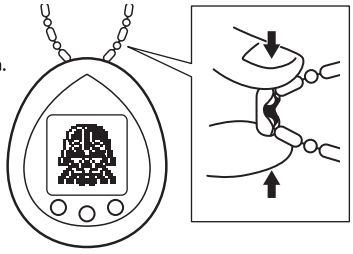

Hook the tip of the chain into the groove and pull it strongly to lock.

2

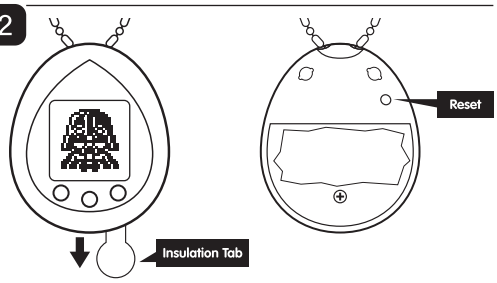

HOW TO MEET ANAKIN SKYWALKER

1. **PULL** the shipping tab from side of Tamagotchi device.
2. **RESET** if necessary by pressing the reset switch on the back of the Tamagotchi device with a thin object like a pen or pencil point. Please do not press the reset switch too hard, or you may damage the Tamagotchi device.

3. **SET CLOCK:** when hour is flashing, press the A button to select correct hour. Press the B button to confirm. When minute is flashing, press the A button to select correct minute. Press the B button to confirm. Press the C button to return to the previous selection.

- **ANAKIN SKYWALKER WILL NOT APPEAR UNLESS YOU SET THE CLOCK.**
- **AM IN THE MORNING AND PM IN THE AFTERNOON. PLEASE BE CAREFUL NOT TO MAKE A MISTAKE!**

4. Start taking care of Anakin Skywalker after he leaves his home.

PATH TO BECOMING DARTH VADER



START TAKING CARE OF ANAKIN SKYWALKER AFTER HE LEAVES HIS HOME.	ANAKIN SKYWALKER	WHICH APPEARANCE WILL YOU GET TO EXPERIENCE?

Depending on how you care for him, Anakin Skywalker will go over to the dark side.

3 HOW TO TAKE CARE

CALL

When Anakin Skywalker or Darth Vader calls, please press the A button and take care of him. After taking care of Anakin or Darth Vader, you can press the C button to see their reaction. Reactions vary depending on which character you are raising.

FOOD/ENERGY CAPSULES/FRUIT/REST IN THE MEDITATION CHAMBER

If Anakin Skywalker or Darth Vader is hungry, press the A button to select and the B button to decide. Then press the A button to select and the B button to decide.

ENCOUNTERS

If Anakin Skywalker or Darth Vader is feeling blue, press the A button to select and the B button to decide.

GAMES

If your Darth Vader Tamagotchi wants to play, press the A button to select from the selection screen and use the B button to decide.

LETTER CATCH: "STAR WARS"

・Collect the letters in "STAR WARS"!

Move the cursor at the bottom of the screen to catch the falling letters in the order "STAR WARS" is spelled in the top-right corner. If you succeed, Anakin Skywalker or Darth Vader will be happy. If you fail, they will be sad.

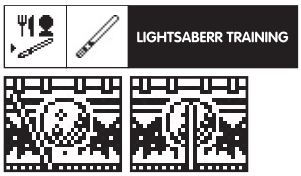

LIGHTSABER!

Press the A or B buttons when the LIGHTSABER approaches the center and master its use!

CHASE THE X-WING!

Press the A button to lower the TIE fighter ( ) and the B button to raise it. Avoid asteroids ( ) and catch the X-wing ( )! Fly the TIE fighter well to capture the X-wing! It's game over if you miss the X-wing or an asteroid hits you.

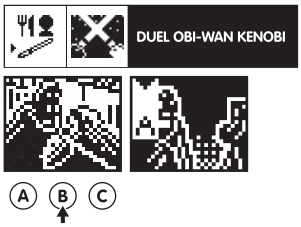

DARTH VADER VS. OBI-WAN KENOBI

Correctly press the buttons at the top left of the screen as directed. It's game over if you fail to press the buttons in time or press the wrong one.

LUKE SKYWALKER VS. DARTH VADER

Press the A button as many times as possible while Luke Skywalker and Darth Vader are fighting.

LIGHT

When your Anakin Skywalker or Darth Vader sleeps, press the A button, select from the selection screen with the A button, decide with the B button to turn off the light. When your Anakin Skywalker or Darth Vader sleeps, only ON/OFF of light, ON/OFF of sound, and clock display operations can be performed. You can't turn the light ON/OFF when your Anakin Skywalker or Darth Vader is awake.

ENEMY APPROACH

When you don't take good care of Anakin Skywalker or Darth Vader, an enemy will come and try to occupy the screen. The enemy will change depending on which character you are raising. Press the A button to defeat the enemy.

CHARACTERS LEAVING THE SCREEN

Your character will become sick if you are not close with him. Press A button to cure him. If a character stays sick for a long time, that character will go away from your screen. If you continue to neglect Anakin Skywalker or Darth Vader, they will leave. A scene relevant to the character will play.

HOW TO MEET ANAKIN SKYWALKER AGAIN

If you press the A button while holding down the C button, the opening scenes starts again.

4 CLOCK

● WHEN YOU WANT TO VIEW THE TIME

Press the B button when you see the Tamagotchi on the screen. Press the B button again to go back to the screen.

● WHEN YOU WANT TO SET THE TIME

Press and hold C button and press A button when you see clock on the screen. See section 2 SET CLOCK.

5 SOUND ON / OFF

Press the A and C button at the same time when you can see the Tamagotchi on the screen. Select sound ON or OFF with the A button and confirm with B button.

- You cannot change sound if you need to take care of Tamagotchi.
- Please be careful if you set OFF for sound, you will not hear Tamagotchi's warning (calling) sounds.

6 CHANGING BATTERIES

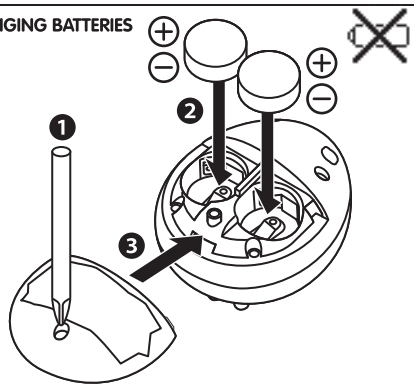

NOTE: when battery dies and you restart, you begin again with the birth of your Tamagotchi.

1. Using a screwdriver, remove bottom of device. Adult assembly required.
2. Take out old batteries, insert 2 new batteries (LR44, 1.5V) making sure to align "+" and "–" signs properly.
3. Replace battery box lid. Please "RESET" again.

- **Please also "RESET" when operations don't work or when you see something wrong on the screen.**
- **Tamagotchi can't save data. Note that the history of play will reset if you change battery or reset.**

- Parents and guardians: Please read this entire instruction sheet before allowing children to play.

In order to protect the environment, please do not dispose of this product with your household waste. Please dispose of it at a designated collection facility in your area.

BANDAI SAS
15 Rue Felix Mangini
69009 Lyon France

WARNING!

Contains Button Battery
Button batteries are hazardous and can cause serious injuries if swallowed or placed inside any part of the body.
Keep batteries away from children whether new or used. Dispose of used batteries immediately.
If you think that batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention

Non-Li

MADE IN CHINA

Manufactured for Bandai Namco Toys & Collectibles America Inc., 23 Odyssey, Irvine, California 92618.

Actual size, color, style and decoration may vary. Bandai logo: ®and © 2025 BANDAI. TAMAGOTCHI and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © BANDAI. All Rights Reserved.

WARNING! Not suitable for children under 3 years. Small parts. Choking hazard. Colours, contents and decoration of contents may vary. Not all products may be available in your country. Retain packaging and instruction as it contains important information. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Only batteries of a recommended type or similar type shall be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Supervise children if they are replacing batteries themselves to ensure these guidelines are followed. Store unused batteries in their packaging and away from metal objects which can cause a short-circuit. Caution: Keep batteries away from children. Batteries may be harmful if swallowed. Manufactured in China. Distributed by: Bandai UK Ltd, 37-39 Kew Foot Road, Richmond, TW9 2SS, UK. For further information email: support@bandaistore.co.uk or online at www.bandai.co.uk

©& ™ Lucasfilm Ltd.
Used Under License.

CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

Do not 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, or 5) step on toy as it may result in serious injury.

- Be careful not to pinch fingers with hinged parts of toy.

WARNING! This product contains a button cell or a coin battery. A button cell or coin battery can cause serious internal chemical burns if swallowed.

WARNING: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.